


# **Historic, Archive Document**

Do not assume content reflects current  
scientific knowledge, policies, or practices.



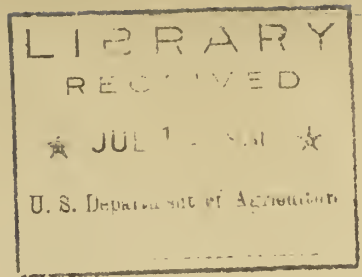

INSTRUCTIONS FOR TRANSFERRING  
DECALCOMANIAS

1. Give the transfer a thin and smooth coat of cement or rubbing varnish.
2. Let this coating of cement or varnish become sufficiently dry, that is, thoroughly sticky or tacky, before laying the transfer on the work. Wet the place where you intend putting the transfer, or wet the face or cemented side of the transfer before laying it on the place to be decorated. Then roll it down smoothly, rolling the moisture and air from under the transfer. Then wet the paper and pull it off. Should there be any blisters or wrinkles after this transfer paper has been taken off, then take your roller and dip it in water, and roll over the whole transfer evenly and smoothly, and this will press down the blisters as well as the wrinkles and put the transfer perfect and solid to the panel or surface you are decorating.
3. After this has been done, wash off the glue or sticky substance that is on the transfer or around it, with a wet sponge or chamois and mop it dry.
4. In order to remove the cement or varnish stains that are around the transfers, take a little benzine on a chamois or cloth, and wash carefully around same. This will remove all stains of cement or varnish.

